

snom 300 IP Phone – Quick Installation Guide


Your snom 300 IP Phone from Yak will come pre-configured. If you already own a snom 300 IP Phone, please contact our Technical Support for configuration instructions.

To get started, please unpack the phone and cables.

Please look at the back of the phone to see the available connections. Please connect the cables as follows:

1. Connect the base unit and handset together using the curly phone cable – it plugs into the socket with the phone icon.
2. Using the coloured Ethernet cable, connect one end to the port marked NET and the other end to an Ethernet port on your modem/router. The other NET port on your phone can be used to connect your PC if you don't have a second Ethernet socket on your modem/router.
3. Connect and plug in the power cable. Wait a few seconds for your phone to register with Yak Digital Phone service.

For more details, a complete manual is offered on the snom website: www.snom.com/wiki

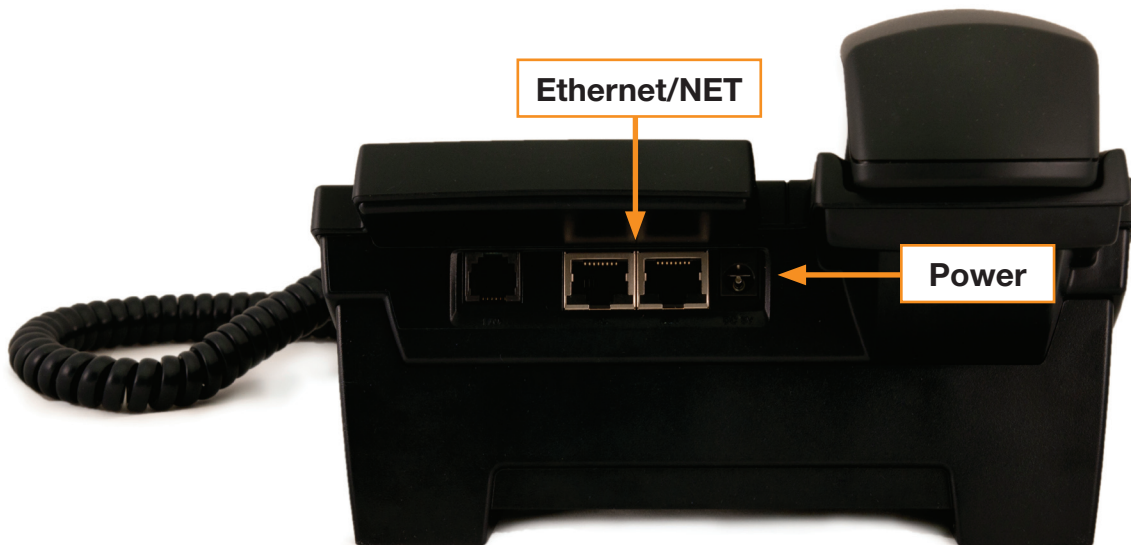

yak[®]
the way you connect